Atlas 210X/215X Transceivers Panadapter Install

Includes the LE Model

Version 1.08 January 1, 2017



TABLE OF CONTENTS

I.	OVERVIEW	4
А. В.	Audience Objectives	4 4
II.	ENGINEERING CONSIDERATIONS	4
A. B. C. D.	GENERAL CONSIDERATIONS LOCATION OF PAT BOARD ELSIE PAT 6M LOW PASS FILTER SIMULATION PAT 6M LOW PASS FILTER	4 5 5 6
III.	INSTALLATION	6
А. В.	Procure Parts Install parts and software	6 7
IV.	CALIBRATION & ADJUSTMENT	7
A. B. C. E. F. G.	FREQUENCY CALIBRATION INPUT CHANNEL CALIBRATION FOR TX HDSDR SOUNDCARD CONFIGURATION HDSDR RF FRONT-END + CALIBRATION CONFIGURATION S METER CALIBRATION SDRPLAY RSP1 BASIC CONFIGURATION SDRPLAY RSP1 ADVANCED CONFIGURATION	7 8 8 9 9 10 10
V.	OPERATION	11
V. A. B. C. D.	OPERATION Non-tracking of VFOs Displayed Bandwidth Quirks Frequency Manager	11 11 11 11 11
V. A. B. C. D. VI.	OPERATION Non-tracking of VFOs Displayed Bandwidth Quirks Frequency Manager WINDOWS TABLET FOR DISPLAY	 11 11 11 11 11 11 12
V. A. B. C. D. VI. A.	OPERATION Non-tracking of VFOs Displayed Bandwidth Quirks Frequency Manager WINDOWS TABLET FOR DISPLAY BLOCK DIAGRAM	 11 11 11 11 11 12 13
V. A. B. C. D. VI. A. VII.	OPERATION NON-TRACKING OF VFOS DISPLAYED BANDWIDTH QUIRKS FREQUENCY MANAGER WINDOWS TABLET FOR DISPLAY BLOCK DIAGRAM APPENDIX.	 11 11 11 11 11 12 13 14
V. A. B. C. D. VI. A. VII. A. B.	OPERATION NON-TRACKING OF VFOS DISPLAYED BANDWIDTH QUIRKS FREQUENCY MANAGER WINDOWS TABLET FOR DISPLAY BLOCK DIAGRAM APPENDIX PAT 6M BOARD INSTALLED ON ATLAS PC-120 BOARD TOP VIEW SHOWING PAT BOARD ON PC-120 BOARD	 11 11 11 11 11 11 12 13 14 14 14 14
V. A. B. C. D. VI. A. VII. A. B. C. D.	OPERATION NON-TRACKING OF VFOS DISPLAYED BANDWIDTH QUIRKS FREQUENCY MANAGER WINDOWS TABLET FOR DISPLAY BLOCK DIAGRAM APPENDIX PAT 6M BOARD INSTALLED ON ATLAS PC-120 BOARD TOP VIEW SHOWING PAT BOARD ON PC-120 BOARD PAT 6M BOARD INTERFACE CABLE TO PC-120 EDGE CARD CONNECTOR IF TAP INTERFACE CABLE FED THROUGH J6 AUX SOCKET	 11 11 11 11 11 11 12 13 14 14 14 15 15
V. A. B. C. D. VI. A. VII. A. B. C. D. E.	OPERATION NON-TRACKING OF VFOS DISPLAYED BANDWIDTH QUIRKS FREQUENCY MANAGER WINDOWS TABLET FOR DISPLAY BLOCK DIAGRAM PAT 6M BOARD INSTALLED ON ATLAS PC-120 BOARD TOP VIEW SHOWING PAT BOARD ON PC-120 BOARD PAT 6M BOARD INTERFACE CABLE TO PC-120 EDGE CARD CONNECTOR IF TAP INTERFACE CABLE FED THROUGH J6 AUX SOCKET IF TAP INTERFACE CABLE WITH SMA JACK	 11 11 11 11 11 12 13 14 14 15 15 16
V. A. B. C. D. VI. A. VII. A. E. F. G. H	OPERATION	 11 11 11 11 11 11 11 12 13 14 14 14 15 16 16 16 17 17
V. A. B. C. D. VI. A. VII. A. E. F. G. H. I.	OPERATION NON-TRACKING OF VFOS DISPLAYED BANDWIDTH QUIRKS FREQUENCY MANAGER WINDOWS TABLET FOR DISPLAY BLOCK DIAGRAM APPENDIX PAT 6M BOARD INSTALLED ON ATLAS PC-120 BOARD TOP VIEW SHOWING PAT BOARD ON PC-120 BOARD PAT 6M BOARD INTERFACE CABLE TO PC-120 EDGE CARD CONNECTOR IF TAP INTERFACE CABLE FED THROUGH J6 AUX SOCKET IF TAP INTERFACE CABLE WITH SMA JACK POTENTIAL LOCATION FOR INSTALLING BULKHEAD MOUNT SMA JACK SIGNAL DISPLAY IN TX MODE WATERFALL DISPLAY WITH CW SIGNALS SDRPLAY RSP1 INTERFACED TO ATLAS RADIO AND PC	 11 11 11 11 11 11 11 12 13 14 14 14 15 16 16 16 17 18
V. A. B. C. D. VI. A. VII. A. VII. A. E. F. G. H. I. J.	OPERATION Non-tracking of VFOs Displayed Bandwidth Quirks Frequency Manager WINDOWS TABLET FOR DISPLAY Block Diagram APPENDIX PAT 6M board installed on Atlas PC-120 board TOP View Showing PAT board on PC-120 Board PAT 6M board interface cable to PC-120 Edge Card Connector IF Tap Interface Cable fed through J6 Aux socket IF Tap Interface Cable with SMA Jack Potential Location for installing bulkhead mount SMA Jack Signal Display in TX Mode Waterfall Display with CW Signals SDRPLay RSP1 Interfaced to Atlas Radio and PC HDSDR RX DSP Bandwidth	 11 11 11 11 11 11 11 11 12 13 14 14 15 16 16 17 18 18 10

M.	РАТ 6М SCHEMATIC	20
N.	210X IF TAP POINT	20

I. <u>OVERVIEW</u>

Since the early 1930's, ham radio operators have been using receiver add-on boxes so that would allow them to see a visual display of RF signals across a given band. This add-on box is called a panadapter, which is short for panoramic adapter. The early panadapters used CRTs for the display. Today's units use LCD screens on either a standalone box or on a PC. Prices range from a low of around \$30 for the eBay RTL units to a high of \$700+ for the Elecraft P3 standalone box.

The panadapter's vertical axis of the display shows signal strength amplitude and the horizontal axis shows the frequency, with the center of the display being the frequency that the receiver is tuned to. At a single glance, one could instantly see all the signals across a segment of a band. This mostly eliminated the need for manually tuning the receiver frequency across the band in small frequency increments, in search of signals.

A panadapter can be used as a separate receiver, using either common antenna or it can be connected to an IF tap point within the receiver. This article discusses the installation of a panadapter at an IF tap point on the first IF of an Atlas 210X/215X transceiver.

A. Audience

This document is written for amateur radio operators that want to install a panadapter in their Atlas radio. This project is low in cost and only requires minimal modification to the radio. The radio can easily be returned to the previous state if one wishes to remove the panadapter option at a later date.

B. Objectives

This document was written with the following objectives:

Provide an IF Output jack on the rear of the radio so that an external panadapter can be connected The IF tap should work with the 5520 KHz and the 5645 KHz IF of the receiver Use a prepackaged panadapter device that does not require a PC sound card Use a panadapter device that can be used as a standalone receiver Use freeware software for the panadapter display

II. Engineering Considerations

There are a number of different ways to implement a panadapter on an Atlas radio. This design is divided into two separate areas – the IF tap point in the receiver and the device used to convert the IF signals into visual signals on a LCD display.

A. General Considerations

The implementation requires a minimal amount of modification to the radio and is moderate in cost. The most expensive part is the SDRPlay RSP1 receiver. The cost of this unit is about \$130 new and used ones can be found on the ham classified forums for around \$100.

The key objective for the selected IF tap point is to insure that there is no degradation of the received/transmitted signal. Another important consideration is to obtain maximum displayed bandwidth. This implementation places the IF tap point on the output of the PC-120 1st IF amplifier. This tap point provides a flat display response of about 80 KHz and a usable bandwidth of about 200+ KHz. The bandwidth is limited by the bandwidth of the L124 IF transformer.

There is limited space on the rear panel of the Atlas radio to install a female SMA jack. Installing a jack on the rear panel would require drilling a hole in the panel. The area between the antenna jack and the key jack would have enough space for a bulkhead mount SMA jack. The IF tap coax cable is brought out through the center hole of the J6 Auxiliary socket. This prevents plugging a connector into the J6 socket, but I never use that socket. The G4HUP PAT-6M amplifier board provides a high degree of isolation between the output of the 1st IF amp and the attached SDRPlay receiver. The overall gain of the amp is about 1 db. The RF signal fed into the SDRPlay receiver should be at the same level as the signal being fed into the antenna jack of the radio.

A total of 33 db of attenuation is needed between the output of the PAT amp and the input of the SDRPlay receiver. Ten db of attenuation is installed on the PAT board. External attenuation of about 20 db needs to be installed. Mini Circuit 20 db SMA attenuators can be found on eBay for about \$10 to \$15. G4HUP has designed the board to take up to a -20 dbm input signal with no overload.

There are several different SDR apps that can be used with the SDRPlay hardware. SDR Console and SDR Uno have some interesting features. However, the HDSDR software seemed to be less prone to overloading at high received signal levels.

B. Location of PAT Board

There are a number of locations in the Atlas radio for installing the PAT board. The easiest accessible location is the bottom on the chassis next to the PC-120 edge card socket. This location would require a long coax cable to go from the 1^{st} IF Amp collector to the input of the board. By locating the board on the foil side of the PC-120 board, then the input cable wire is about 1" long.

C. Elsie PAT 6M Low Pass Filter Simulation

The PAT 6M board has a low pass filter cutoff of 6 MHz for use with an Elecraft transceiver. The cut off frequency works very well with an Atlas radio. Here is an Elsie simulation of the filter:



D. PAT 6M Low Pass Filter

Here is the measured curve using a Rigol DSA 815 spectrum analyzer:



III. Installation

Here are the installation steps for installing a SDRPlay receiver as a panadapter on an Atlas transceiver:

A. Procure Parts

Purchase PAT 6M amplifier board The board is available in kit form or pre-assembled <u>http://huprf.com/huprf/orders-prices/#PAT</u>

Here are some good articles on the design and operation of the PAT boards http://huprf.com/huprf/wp-content/uploads/2016/03/PAT-Radcom-14.pdf http://g4hup.com/PAT%20V2%20description.pdf http://g4hup.com/PAT%20V2%20description.pdf

10 db SMD resistors Attenuator calculator: http://chemandy.com/calculators/matching-pi-attenuator-calculator.htm

20 db MCL SMA attenuator https://www.minicircuits.com/pdfs/VAT-20+.pdf

Small diameter Teflon coax cable terminated on one end with a female SMA jack http://www.ebay.com/itm/Pigtail-SMA-female-SMA-jack-bulkhead-RG316-LOW-LOSS-COAX-RF-Cable-4-24-/162181071026?var=&hash=item6b5eef2918

Double-backed tape

SDRPlay RSP1 receiver http://www.sdrplay.com/

SDRPlay drivers http://www.sdrplay.com/windows.html HDSDR software http://www.hdsdr.de/ It is recommended that you use the 2.70 version

B. Install parts and software

Assemble the PAT board if purchased as a kit

Install the 10 db pad resistors on the board

Install the PAT board on the foil side of the Atlas PC-120 board with double back tape Install a short wire from the PC-120 Q125 collector pad to the input to the PAT board Install a short ground wire from the PAT board ground plane to the PC-120 ground plane Install a short coax cable from output pad on the PAT board to Pin 9 on the PC-120 board Feed a female SMA terminated coax cable through the center hole on the J6 Aux socket Terminate the other end of the coax cable on pin 9 of the PC-120 edge card connector

Steps for installing the software: <u>https://www.dropbox.com/sh/7434avup8mrkzti/AAADNCEM9p6XDoVh-</u> tjoKxTHa?dl=0&preview=RSPHDSDR.pdf

Download and install HDSDR software on your PC http://www.hdsdr.de/

Download and install SDRPlay drivers on your PC <u>http://www.sdrplay.com/downloads/</u>

Help Info for configuring HDSDR software <u>https://sites.google.com/site/g4zfqradio/installing-and-using-hdsdr/</u> <u>http://www.sdrplay.com/Panadapterintro1.pdf</u>

HFSDR FAQs http://www.hdsdr.de/faq.html

It is recommended that you use the "start here" tab on the SDRPlay Web site.

IV. Calibration & Adjustment

There are seven major calibration and adjustment areas on the HDSDR application:

A. Frequency Calibration

Tune in a strong WWV signal on the Atlas radio

Adjust for equal volume levels from your PC (SDRPlay signal) and the Atlas radio Adjust the Tune setting on the HDSRD screen for zero beat between the two audio signals Here is a typical Frequency Calibration screen:



B. Input Channel Calibration for RX

This calibration should follow the standard HDSDR instructions. Here is a typical calibration screen

Raw Fine	<u>1 to 4 samples delay</u>	RX DC Remov	al Mo	de:	Auto	Banc	lwidth
1 1	Left:0 💽 Right:0 💽	Left: 0.0007719	Right:	-0.00	003884	100] [Hz]
	Some sound cards exihib between channels, i.e. sample or later than those processed b This plays havoc with a prog relationship between To compensate for this s approximately +10 kHz from th By using the Amplitude and f response. The controls interac adjustment. You should be the image signals. Move th The settings	it the annoying proble as digitized with one cl ay the other channel at ram like HDSDR, that n the I and Q channels kew, please feed an I, he band center, and o Phase (raw and fine) sl ct somewhat, so you w a able to get 70 dB of of me sliders very slowly. N will be remembered fro	m of a phas nannel are nd also with needs a pr s, when wo /Q strong, s bserve an i liders, slow/ ill have to difference b When done om session	se and delive h som recise rking steady image ly try t repea betwe s, clicl to se	d amplitu ared to so e amplitu phase a in I/Q m v carrier, respons o minimiz t two or t en the de k on the ssion.	de skew oftware s ide unba nd ampli ode. offset by e at -10 ve this im hree time esired an OK butto	ooner lance. tude kHz. age es the d
ΤI	Raw						
	Fine	Phase: 0.;	229 Deg	1			
Amplitude: 0 78333	ОК	Rese	et to 0		ſ	Cano	el

C. HDSDR Soundcard Configuration Default settings are used

TX Output (to Radio)

D. HDSDR RF Front-End + Calibration Configuration

RF front-en	id frequ	iency op	tions &	Calibratio	on					2	×
	S	DR hard	ware co	upling				LO free	quency	calibration	
⊖ SDR har	rdware (connected	d to antei	nna (defa	ult)			Current	Tune :y [Hz]	Correct Tune Frequency [Hz]	
SDR on	IF outp	ut, which	is contro	lled ma	anually	~		0.00	222		
Sync M Full Ind	1ode sync in epende epende	both dire nt Tune ir nt Tune, l	ctions h HDSDR but sync	on extern	al chan <u>c</u>	je		Rese Frequency (Calculate	
IF-freq	uency:		Glot	al Offset				Hint: Tune to	i a statio	n with known	
564500		[Hz]	0		[Hz]			frequency as	referen	ice, e.g. a WWV o ECSS mode with	r
Addition	hal Offs	a et per Mo	de in Hz		1.55 55			AFC to autor carrier exact	natically ly. Use h	tune the referenc	e
AM	FM	LSB	USB	CW_U	C₩_L	DIG_U	DIG_L	frequency fo	r best ca	alibration results.	
0	0	0	0	0	0	0	0				
Mirra Mirra oper Swa SDR har LO Free Sample	or RF Sp rate CW p CW a rdware i quency rdware i rate of	bectrum in bectrum fo / in lower nd CWR f on Down/ of Down/ in undersa Analog-Di	a general or Tune > sideband or Omni-f Up-Convi (Up-Convi ampling m ampling m ampling m	= 15 (LSB) Rig erter erter in H node verter in H	kHz z: 120 Hz: 800	000000			Pha t	se 0°	

E. S Meter Calibration

Input a -73 dbm signal into the antenna jack of the Atlas radio Select the S Meter Calibration option and adjust the HDSDR signal on the dbm chart for -73 dbm Here are typical readings that you should see for various signal generator levels:

Signal	HDSDR	HDSDR	210X
Generator Level	S- Meter	dbm Level	LE S-Meter
-120 dbm	S4	-119 dbm	SO
-110 dbm	S5	-110 dbm	S0.5
-100 dbm	S6	-100 dbm	S3
-90 dbm	S7.5	-90 dbm	S6.5
-80 dbm	S9	-80 dbm	S8
-70 dbm	S9 +10	-70 dbm	S9 +1
-60 dbm	S9 +20	-60 dbm	S9 +10
-50 dbm	S9 +30	-50 dbm	S9 +20
-40 dbm	S9 +39	-41 dbm	S9 +30
-30 dbm	S9 +42	-36 dbm	S9 +40
-20 dbm	S9 +43	-34 dbm	S9 +50

F. SDRPlay RSP1 Basic Configuration

The SDRPlay RSP1 configuration option is found under the HDSDR ExtIO option.



G. SDRPlay RSP1 Advanced Configuration Default settings are used.

_

● Auto ◯ 120M	IHz 🔿 144MHz 🔿 168MHz
Full Coverage	
uner DC Offset Com	pensation
🔿 Static	Refresh Period
🔿 One Shot	24mS ∽
Periodic	Tracking Period
🔿 Continuous	58.60 uS
Post Tuner DC/IQ C	ompensation
🖾 Enable Post Tu	uner DC/IQ Compensation

V. Operation

Here are some detailed instructions for using the SDRPlay receiver with HDSDR:

http://sdrplay.com/docs/Using HDSDR with SDRplay Module R2P4%20.pdf

A. Non-tracking of VFOs

Once the HDSDR app is configured with the initial settings, then you are ready to start testing. There is no computer interface between the Atlas radio and the PC that runs the HDSDR software. Thus, the VFOs in the SDRPlay receiver and the Atlas radio do not automatically track to each other. By setting the LO and TUNE frequencies to 0.00, then the center of the display will be the frequency that you are tuned to on the Atlas receiver. As you change the frequency of the Atlas receiver, the panadapter display will remain centered on your receiver frequency.

B. Displayed Bandwidth

At any given time, you can see signals above and below your received frequency. The displayed bandwidth is controlled by the slider bar to the left of the Zoom control for the main display. At maximum zoom, a total bandwidth of 240 KHz will be displayed. At this bandwidth, the display baseline noise amplitude will drop off on either side of the center frequency. This is the result of the narrow bandwidth of the 1st IF amplifier.

Please note that there are two options for the LO control – A and B. Additional functionality can be obtained by making use of both VFOs. The display on the front page of the doc has been configured to remove the waterfall display. Please see the Appendix for a snapshot with the Waterfall option enabled.

C. Quirks

There are some quirks in the operation of panadapter. This is a result of the SDRPlay not being under the control of the Atlas radio.

Atlas radios use high side LO injection on 80M/40M and low side injection for 20M/15M/10M. For the 80M/40M bands, you will need to set the mode to LSB and enable the HDSDR option for "Swap I and Q channel for RX Input". When you change to the 20M/15M/10M bands, USB stations will be readable without changing HDSDR to the USB mode. The panadapter display will show the signal to the left of the centerline frequency. Also, the highest frequency on the display will be on the left hand side of the display and the lowest frequency will be on the right hand side of the display.

To get the correct responses on 20M/15M/10M, please perform the following changes: Switch to the USB mode on the HDSDR screen Disable the option "Swap I and Q channel for RX Input".

D. Frequency Manager

If you use the Frequency Manager option on HDSDR, you can program up the desired center frequency for each band, along with the desired mode. In the Frequency Manager mode, the display frequencies remain fixed and signals will move across the display as you change the frequency of you Atlas radio. In this mode, the display centerline frequency will only be correct when the Atlas radio is tuned to the same frequency.

In this mode, you can also use the SDRPlay as a second receiver and the frequency can be changed with the HDSDR Tune control. The received frequency will move up and down the band according to the Tune frequency that you dial in.

The recommended mode is to not use the Frequency manager and keep the LO and Tune frequencies at 000.000.000 MHz on each band.

11

VI. Windows Tablet For Display

There are a number of inexpensive Windows tablets that can be used to run the HDSDR application. Most of these tablets only have 1 GB of memory, but this is enough to run the app. These tablets also have enough CPU horsepower to provide quick updates to the display. Using a tablet eliminates the need to tie up your main computer for running HDSDR or having to install a second computer.

For my setup, I am using a HP Stream 7 5709. This tablet has 1 GB of memory, has a 7" display, and comes standard with Windows 8.1. I am using Windows 10 Home because the previous owner had upgraded to this version of OS while it was still free from Microsoft. Windows 8.1 should also work OK, but I have not tested it. These HP tablets are readily available on eBay for about \$60.

Another possibility is the Dell Venue 8 Pro 5855. This tablet has a 8" display, has 2 GB of memory, and comes with Windows 10. These tablets can be picked up as factory refurbished for less than \$200.



Here is a picture of the HP tablet sitting on top of my Atlas 210X LE radio:

A. Block Diagram

Here is a block diagram of the panadapter setup using a HP tablet:

HP 5709 Tablet HDSDR Panadapter



VII. <u>Appendix</u>

A. PAT 6M board installed on Atlas PC-120 board



B. Top View Showing PAT board on PC-120 Board



C. PAT 6M board interface cable to PC-120 Edge Card Connector



D. IF Tap Interface Cable fed through J6 Aux socket



E. IF Tap Interface Cable with SMA Jack

Shown with male SMA – female SMA is preferred



F. Potential Location for installing bulkhead mount SMA jack



G. Signal Display In TX Mode

This is a display of the double sideband transmit signal when in the transmit mode while whistling into the microphone.



H. Waterfall Display with CW Signals



I. SDRPlay RSP1 Interfaced to Atlas Radio and PC



J. HDSDR RX DSP Bandwidth

Filter bandwidth set for 300 Hz to 2700 Hz



K. HDSDR RX DSP 1000 Hz Notch



L. Spectrum Analyzer Sweep of Receiver Front End

At the -3db points on the sweep, the bandwidth is about 180 Khz.





```
N. 210X IF Tap Point
```

